


Installation Guide

ARCISAN

Eneo Stop Taps

EN07100

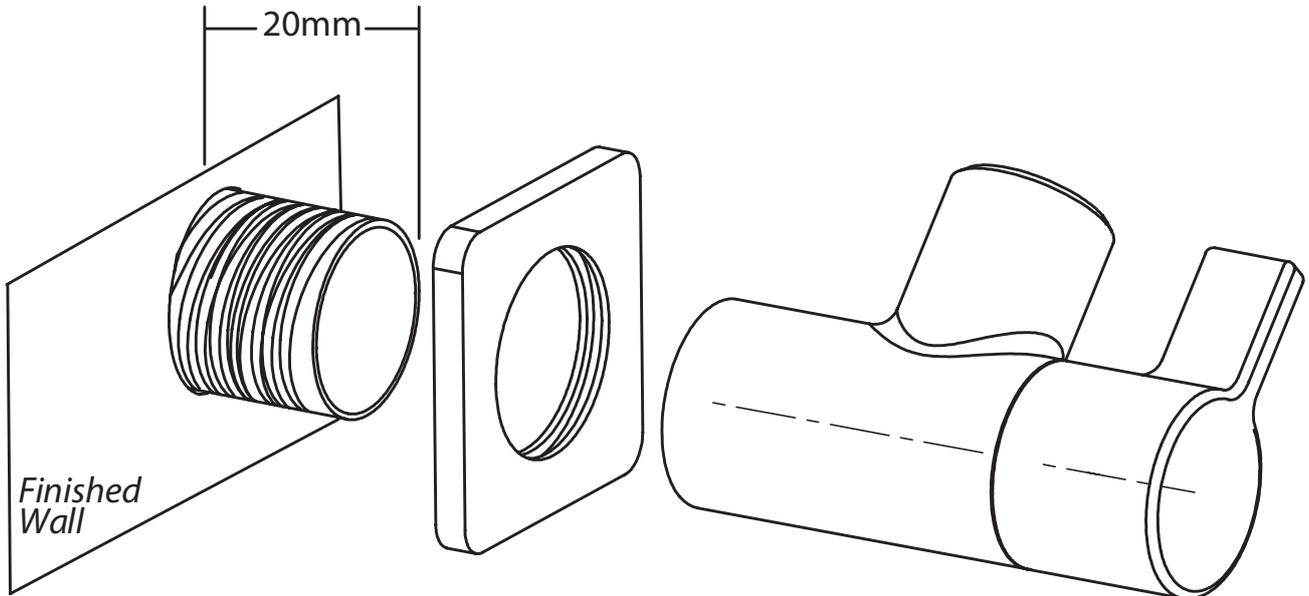

Important Information:

- All pipework must be thoroughly flushed prior to installation.
- Turn off hot and cold water supplies before installation.

Installation:

- 1) Check that the thread is the correct length out of the finished wall, as shown above (20mm).
Remember: use plumbers tape on the thread before screwing the body on.
- 2) Place the cover plate over the main body of the Stop Tap. Screw the Stop Tap body onto the thread, with the outlet facing upwards at the end. DO NOT OVERTIGHTEN.
- 3) Push the back plate flush against the finished wall.
- 4) Turn both spindles to the fully closed position.

IMPORTANT

Pressure and temperature requirements

- Hot and cold water inlet pressures should be equal.
- Inlet pressure range: 150 - 1000kPa
New regulation: 500kPa maximum static pressure at any outlet within a building.
(Ref. AS/NZ 3500. 1-2003, Clause 3.3.4)
- Maximum hot water temperature: 80°C

streamline

www.streamlineproducts.com.au | Ph: 1300 735 352

Dimensions are in millimeters and are subject to manufacturing variations. Streamline reserves the right to vary specifications at any time without notice. Information provided within this specification sheet is correct at the date of printing. Please confirm all particulars with your sales consultant prior to purchase.
Version: 1.0 - August 2015