

Installation Guide

AX01513 | AX01514 | AX01517 | AX01518

Important Information


- Hot and cold water inlet pressures should be equal.
- Operating static pressure is 150–500kpa. If pressure exceeds this, then an approved pressure limiting valve must be fitted.
- Pipework must be flushed out prior to installation of the spout. Damage caused to the spout and aerator by debris coming through the pipework is not covered under warranty.
- Installation should comply to AS/NZS 3500.1 or the relevant local requirements.
- Maximum hot water temperature is 75°C.
- Not suitable for gravity feed applications.

Maintenance and care

- Using a soft cloth with a mild detergent or soap is all that is required to clean surfaces.
- Do not use abrasive cream cleaners or citrus based cleaning products. These will damage the surface.
- Aerator may be removed and cleaned should it become blocked.

Installation

1. Check that the male thread (1), coming out of the wall, is the correct length (minimum 15mm).
2. Apply thread tape to the thread (1).
Note: Ensure thread tape cannot become dislodged and potentially block the flow of water.
3. Slip cover plate (2) over the end of the spout (3).
4. Screw spout (3) onto thread (1) and position as required.
DO NOT OVER TIGHTEN.
5. Slide cover plate (2) back so it sits flush against finished wall.

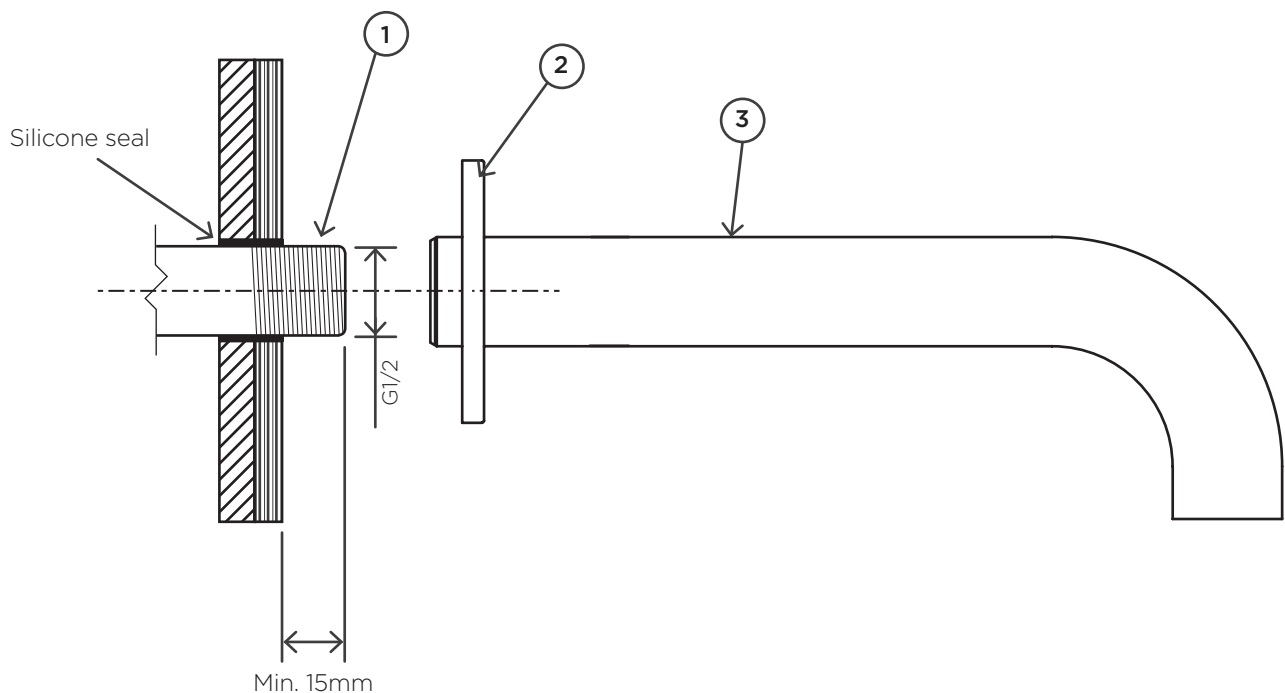

streamline