

## Installation Guide

Arcisan wall mounted Ø200mm showerhead - AR02111

### IMPORTANT INFORMATION

- Operating static pressure is 150—500kpa. If pressure exceeds this, then an approved pressure limiting valve must be fitted.
- Shower may not be suitable for use with gravity-fed, low and unequal pressure supply networks, instantaneous water heaters, tempering valves and thermostatic mixing valves.
- Where showers incorporate flow controllers, care shall be exercised during installation to ensure that the male connecting threads do not damage the flow controllers.
- To be installed in accordance with AS/NZS 3500.

- 1 - Apply thread seal to 1/2" male thread coming out of wall.
- 2 - Slide cover plate over end of wall arm.
- 3 - Screw the wall arm onto the male thread, ensuring a water tight seal.
- 4 - Screw showerhead onto end of wall arm.

### Maintenance and Care

- Using a soft cloth with a mild detergent or soap is all that is required to clean surfaces.
- Do not use abrasive cream cleaners or citrus based cleaning products. These will damage the surface.

stream|ine

[www.streamlineproducts.com.au](http://www.streamlineproducts.com.au) | Ph: 1300 735 352

Dimensions are in millimeters and are subject to manufacturing variations. Streamline reserves the right to vary specifications at any time without notice. Information provided within this installation sheet is correct at the date of printing. Please confirm all particulars against your product prior to installation. Version: 1.0 - July 2018

**WaterMark**  
WM-022818  
AS/NZS 3662  
ARCISAN