


Installation Guide

AR02262, AR02262.4, AR02264.CW

IMPORTANT INFORMATION

- Operating static pressure is 150—500kpa. If pressure exceeds this, then an approved pressure limiting valve must be fitted.
- Shower may not be suitable for use with gravity-fed, low and unequal pressure supply networks, instantaneous water heaters, tempering valves and thermostatic mixing valves.
- Where showers incorporate flow controllers, care shall be exercised during installation to ensure that the male connecting threads do not damage the flow controllers.
- To be installed in accordance with AS/NZS 3500.

- 1 - Mount brass wall brackets to wall at correct distance apart. Please ensure you are using correct plugs and/or screws for the material you are mounting to.
- 2 - Slide cover plates over the attached wall brackets.
- 3 - Slide fixed bracket onto the **bottom** wall bracket. Fit loose bracket onto the top of the rail and slide onto wall bracket.
- 4 - Tighten the grub screws to fix the slide rail onto the wall brackets.
- 5 - Apply thread seal to 1/2" male thread coming out of wall. Screw the wall union onto the male thread, ensuring a water tight seal.
- 6 - Screw hose onto hand-piece and wall union, ensuring a water tight seal. Do not over tighten.
- 7 - Sit hand-piece in slide rail bracket.

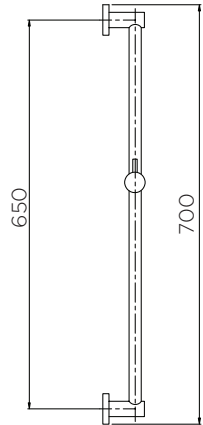

Maintenance and Care

- Using a soft cloth with a mild detergent or soap is all that is required to clean surfaces.
- Do not use abrasive cream cleaners or citrus based cleaning products. These will damage the surface.

stream|ine

www.streamlineproducts.com.au | Ph: 1300 735 352

Dimensions are in millimeters and are subject to manufacturing variations. Streamline reserves the right to vary specifications at any time without notice. Information provided within this installation sheet is correct at the date of printing. Please confirm all particulars against your product prior to installation. Version: 1.2 - November 2020

WaterMark
WM-022818
AS/NZS 3662
ARCISAN