


# ARCISAN


## AXUS PIN FREESTANDING BATH SPOUT AX01530

### INSTALLATION INSTRUCTIONS


#### 1. Components included.

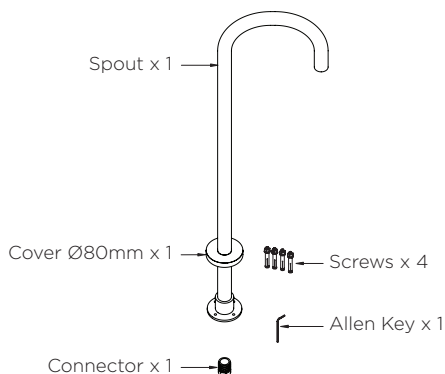


#### 2. Cut a slot and install pipe into it. Make sure the G1/2 connector exceeds floor by 30mm. (Including tile's thickness.)

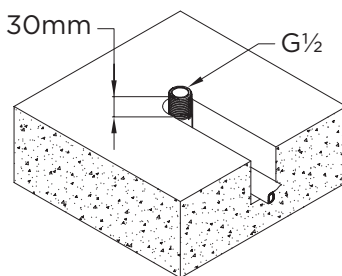

#### 3. Tile the floor.

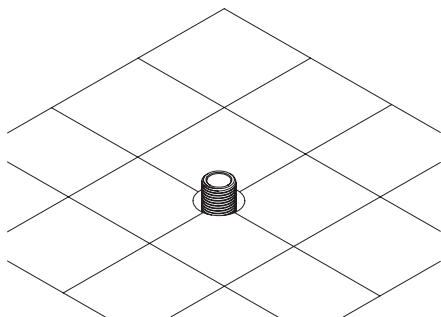

#### 4. Push on spout. Mark 4 holes on floor. Unscrew flange, align holes. Drill Ø6mm holes, screw flange back onto spout.

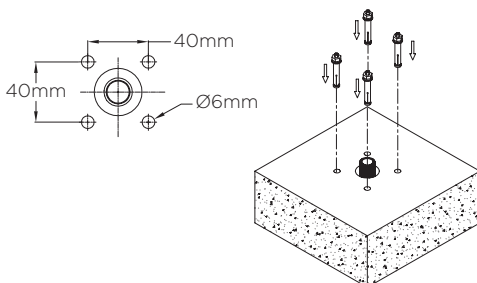


# INSTALLATION INSTRUCTIONS

---

## AX01530

**5.** Seal and screw on connector. Push spout onto connector on floor. Align flange with holes. Mount and tighten 4 screws. Tighten grub screw.

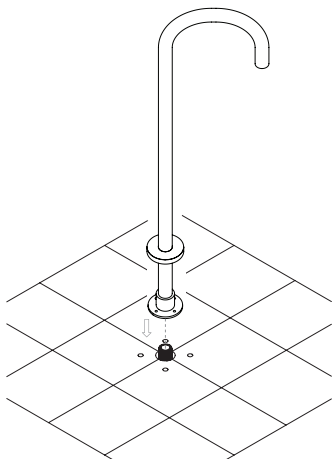

**6.** Complete.

